

SR-8 - Sensor Socket for TGS38xx-series Sensors

Features:

- * Durable for over 500 insertions and removals
- * Firmly fixes sensor into place
- * Contains tab to prevent incorrect insertion of socket
- * Structure prevents incorrect insertion of sensor into socket


Applications:

- * For use in preheating racks, test and calibration equipment
- * For use in finished products



SR-8 is a reliable and durable socket supplied by Figaro, designed specifically for usage with the TGS38xx series of gas sensors.


Structure and Dimensions

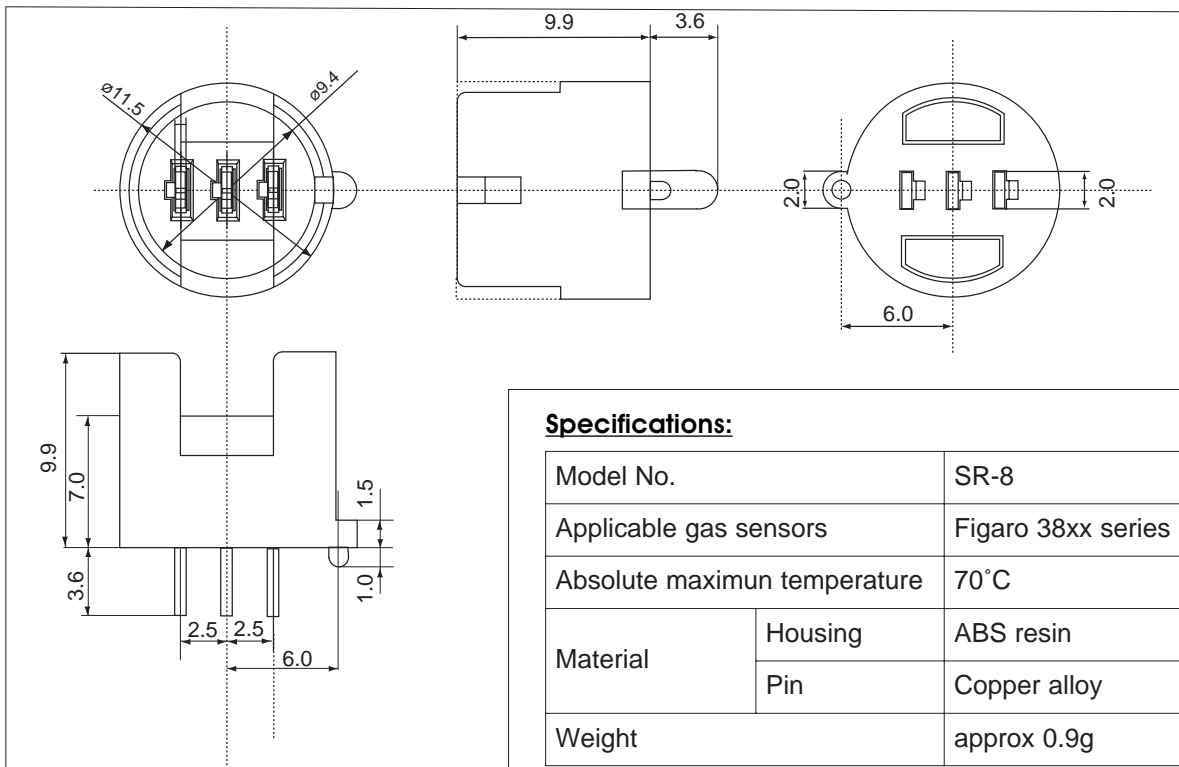

Specifications:

Model No.	SR-8	
Applicable gas sensors	Figaro 38xx series	
Absolute maximum temperature	70°C	
Material	Housing	ABS resin
	Pin	Copper alloy
Weight	approx 0.9g	

Recommended PCB Layout

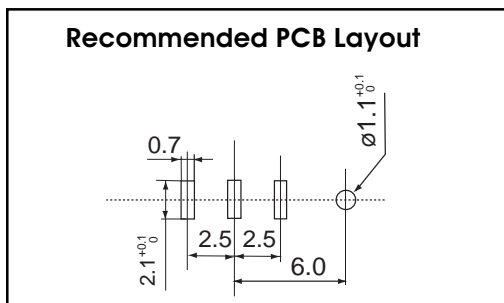

Assembly Instructions:

The pins of the SR-8 are not permanently affixed to the socket. The socket should be soldered onto a PCB as follows:

1. Insert TGS38xx sensor into socket
2. Insert socket onto PCB
3. Affix socket to PCB by soldering
4. Withdraw sensor from socket

FIGARO ENGINEERING INC.
 1-5-11 Senba-nishi
 Mino, Osaka 562 JAPAN
 Phone: (81)-72-728-2561
 Fax: (81)-72-728-0467
 email: figaro@figaro.jp.org